



M4 Rubber Vibration Isolators

The purpose of our rubber vibration isolators is to reduce the mechanical coupling between our transformers and any chassis. The isolators will reduce resonance noise induced in an apparatus chassis from the inevitable vibration generated in mains transformers' cores. Note that the isolators are too stiff to fully isolate the transformers from the chassis, as such devices are far too soft and flexible and may easily result in a damaged unit.

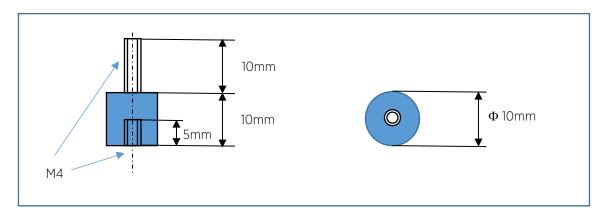

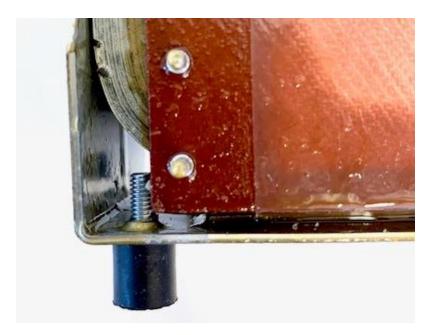



Lundahl Transformers AB, Norrtälje, Sweden, Phone +46 (0) 176-139 30, office@lundahltransformers.com, www.lundahltransformers.com



